

# DTMF Mode

The DTMF mode is a setting that governs how [Dual Tone Multi Frequency](#) signalling is to be performed.

Mode	Description
Compatibility	Use RFC2833 by default but switch to inband when reciever does not support RFC2833.
RFC2833	Send DTMF information as <a href="#">RTP</a> messages.
SIP INFO	Send DTMF information as <a href="#">SIP</a> messages.
Inband	DTMF tones are generated by the calling device.

From:

<http://docs.intenogroup.com/juci/glossary/> - **Inteno Glossary**

Permanent link:

[http://docs.intenogroup.com/juci/glossary/d/dtmf\\_mode](http://docs.intenogroup.com/juci/glossary/d/dtmf_mode)

Last update: **2018/08/10 18:16**

