

Interface Type

The Interface Type defines the base settings for the interface.

Configuration

Type	Description
Standalone	Not requiring hardware.
Any WAN	Any WAN interface.
Bridge	Network bridge .

From:

<http://sdk.intenogroup.com/glossary/> - **Inteno Glossary**

Permanent link:

http://sdk.intenogroup.com/glossary/i/interface_type



Last update: **2018/08/10 18:16**